



Vrod Disassembly and Cleaning Guide



Vrod Disassembly and Cleaning Guide

This is a step by step guide to disassembling and cleaning your Vrod so that its always functional and looking great.

Before we begin, we have a small number of tools that you may find handy when getting through this process. Here are the tools we recommend and links to a popular hardware store where you can find them:

[- Adjustable Wrenches](#)

[- Needle-Nose Pliers](#)


[- Fine Sanding Pad](#)



From time to time you may experience some difficulty in disassembling your Vrod head after prolonged use. This phenomenon is caused by the build-up of resin vapor in the threaded areas of the unit. This will cause the two parts to become “glued” together.

The below image shows the trajectory of the vapor, it shows how it consistently delivers this residue into the threaded section.

This is not uncommon if the device has been given its intended use. It is worth noting that when initially assembling your Vrod, you should never have to overtighten the parts. Finger tight is more than acceptable.

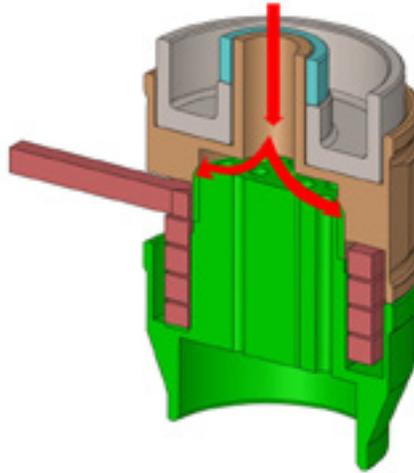

FOLLOW THESE STEPS

Heating up the unit will loosen the reclaim and therefore will make it easier to unscrew each part. Remember to always use caution when handling hot metal parts.

Turn your PID on and set temperature to 150F for 5 - 10 minutes.



Once warm, use your needle-nose pliers to loosen the nut so you can remove the dish.



Using some rags, try to unscrew the diffuser from the head by hand. If this attempt fails, go to the next step.



The Vrod has been designed with wrench flats to provide more leverage when disassembling the it.



Use adjustable wrenches (1 1/4" opening) to break the resin seal.



The wrenches should provide enough force to unscrew both parts from each other.



Once you have followed all these steps, soak all the parts in hot ISO alcohol for an hour followed by a hot bath of water and dish soap. Then wipe down thoroughly.



If you see any stains caused by resin on your device, grab a scotch-brite pad and refinish your piece to the factory brushed finish.



Lastly, give it one last last wash and rinse with water and dish soap. The Vrod should be as good as new and ready for your next session!